

BLINK

Installation v.11-2020




1

Pass the loop end of the BLINK through the suspension line loops then through the riser end




2

Pass the BLINK through the loop below the black tab

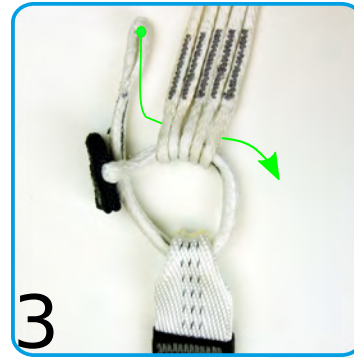


3

Pass the BLINK through the suspension lines loop a second time

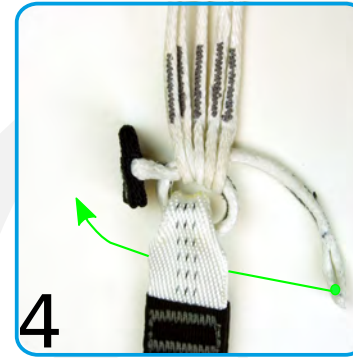


4

Pass the BLINK through the riser a second time

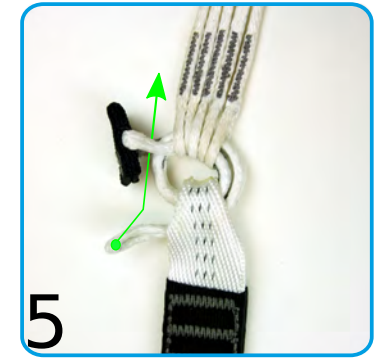

5

Pass the BLINK through the loop below the black tab a second time

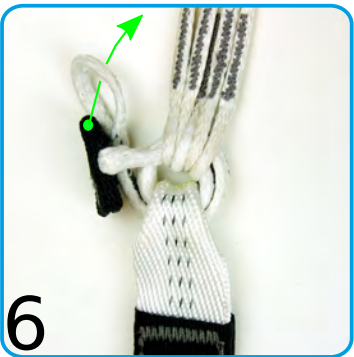


6

Pass the black tab through the loop end




7

Make sure to slide the loop below the black tab to create a lark's head knot

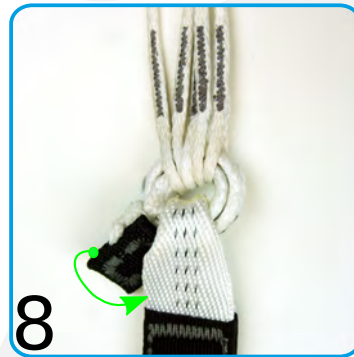


8

Rotate the BLINK so the black tab is tucked inside of the riser loop

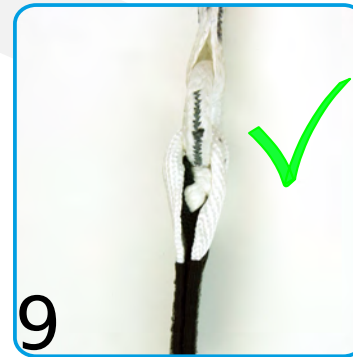

9

From the side, the black tab is secured into the riser loop

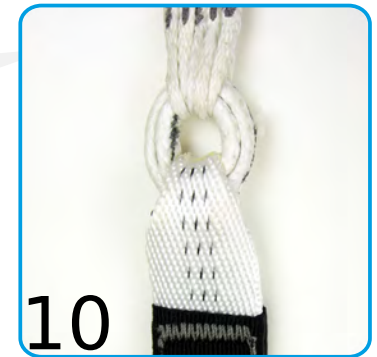

10

Pull suspension lines and the riser apart, strongly, to setup the BLINK



DO NOT pass the black tab directly to the loop